

AARCEE

Party and Tent Rental

Electric Coffee Maker Instructions

1. Remove basket and stem. Add COLD water to desired level.
2. Replace basket & stem. Add regular grind coffee to basket.

The following quantities make a medium brew of coffee:

<u>Coffee Grounds</u>	<u>Brewed Coffee</u>
1 ¼ cups.....	36 cups
1 ½ cups.....	40 cups
2 ½ cups.....	60 cups
4 cups.....	100 cups



3. Replace cover & plug into a standard 110 Volt outlet. Extension cords are not advised. Avoid overloading your circuits—plug in your coffee maker on a circuit that is not being used to power other electrical items.
4. Allow coffee maker to cool down completely before emptying.
5. DO NOT immerse coffee maker in water! Simply wipe outside with a damp cloth. Please, do not use scouring agents or pads on exterior finish.

Approximate brew times:

36 or 40 cup.....	40 Minutes
55, 60, or 100 cup.....	1 Hour